

One last thing...

We've supplied two emergency keys you will see these are digital keys, they do not store your fingerprint data, they only bypass the system. They do not run on batteries, you will however need to make sure they stay away from water. Use these in case you forget your password. We recommend you record one finger from each hand- this will ensure that you'll be able to enter your home- just in something happens to your hand.

Warranty Information.

Subject to terms and conditions of this warranty, Maxwell Biometrics, INC extends a 1 year electronics warranty to the original consumer of our product against defects in material and workmanships long as the original user occupies the residential premise upon which the product was originally installed.

Upon return of the defective product, Maxwell Biometrics sole obligation, at its option, is to either repair or replace the product or refund the original purchase price in exchange for the product.

The following costs, expenses and damages are not covered by the provisions of this limited warranty (i) the labor costs including but not limited to, the costs of the removal and reinstallation of the product. (ii) shipping and freight expenses required to return the product and (iii) any other incidental, consequential indirect special/punitive damages weather based on contract, warranty, tort (including, but not limited to strict liability or negligence) patent infringement , or otherwise, even if advised of the possibility of such damages. Some local laws do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion or limitation may not apply to you.

The provisions of this warranty do not comply to products (i) used in commercial applications (ii) used in common area applications (iii) used for purposes for which they are not designed or intended (iv) which have been subjected to alteration, abuse, misuse, negligence or accident; (v) which have been improperly stored, installed, maintained or operated; (vi) which have been used in violation of written instructions provided by Maxwell Biometrics, Inc . (vii) which have been subjected to improper temperature, humidity, or other environmental conditions; or (viii) which, based on Maxwell Biometrics, examination, do not disclose to Maxwell Biometrics satisfaction non-conformance Additionally this warranty DOES NOT COVER scratched, abrasions, or deterioration due to the use of paints, solvents or other chemicals. Refer to your local laws for your specific rights under this warranty.

Welcome.



The Venetian Collection

CONTENTS

Bits & Pieces
Page 3

Let the fun begin
Page 4

And it continues...
Page 5

The Codes
Page 6

Restoring factory settings
(and other unique settings)
Page 7

Opening the door with fingerprint & password setup:

The MZ button is there so you can either choose to open the door via fingerprint OR Fingerprint and code.

Press the button "MZ" in the battery box (the red light will flash- about 1 second later the green light will turn on) + press admin fingerprint

The buzzer will make 2 long sounds and the green light will flash twice. If revert your settings back to "Fingerprint or password", repeat the above. The buzzer will make 3 long sounds and the green light will flash 3 times (instead of twice).

Resetting your system.

In the battery box there are two buttons the ADEL and MZ buttons. ADEL will reset your lock to its original factory conditions. Press this down (for about 10 seconds) until you hear the device beep 3 times. Once this is done your lock has been successfully reset.

For Your Safety:

If you enter the incorrect password your system will shut itself down for 3 minutes. After this state of dormancy you will be able to access your keypad again.

Batteries:

We recommend that you change batteries once every 6 months. Your batteries should last about a year. Once your batteries run low you'll hear a beeping sound. Replace them as soon as possible.

Fingerprint Code List

Admin #1 code is 3. Admin #2 code is 4

	Admin Fingerprint 1			Admin Fingerprint 2				
	3			4				
234 Chart	1	32	13	342	25	3222	37	3332
	2	33	14	343	26	3223	38	3333
	3	34	15	344	27	3224	39	3334
	4	42	16	422	28	3232	40	3342
	5	43	17	423	29	3233	41	3343
	6	44	18	424	30	3234	42	3344
	7	322	19	432	31	3242	43	3422
	8	323	20	433	32	3243	44	3423
	9	324	21	434	33	3244	45	3424
	10	332	22	442	34	3322	46	3432
	11	333	23	443	35	3323	47	3433
	12	334	24	444	36	3324	48	3434

Delete a Non-Admin fingerprint: 3+admin print+ corresponding code+1

Delete all user fingerprints:

3+admin fingerprint+2222+1


For example: There are 5 employees in an office, Jim and Jack have the admin fingerprints. Allen records his fingerprint as the 1st non-admin fingerprint. Vivian is 2nd, and Jane is 3rd. When Vivian transfers out, her fingerprint has to be deleted. Since she is the 2nd one to record a non-admin fingerprint, her corresponding code of 2 is “33”. You’ll have to input “3+admin fingerprint+33+1” to delete Vivian from the system. Suppose Tracy begins working after Vivian. When Tracy’s fingerprint is recorded, the storage space of Tracy’s fingerprint is the place where Vivian’s fingerprint was stored previously. In other words, its number is “2”(corresponding with “33”). Employees after Jane will follow suit with 5,6,7 etc. Numbers in grey are “people numbers” those in white are their corresponding codes.

Opening the door with Fingerprint AND Password.

Your system is made to automatically open via fingerprint, however if you’d like to open your door with fingerprint and password (one after the other) *Slide up the cover + Authorized Fingerprint +password+”1” or “4”+Authorized Fingerprint+password+”1”*

See the set-up process on page 7

What it looks like....

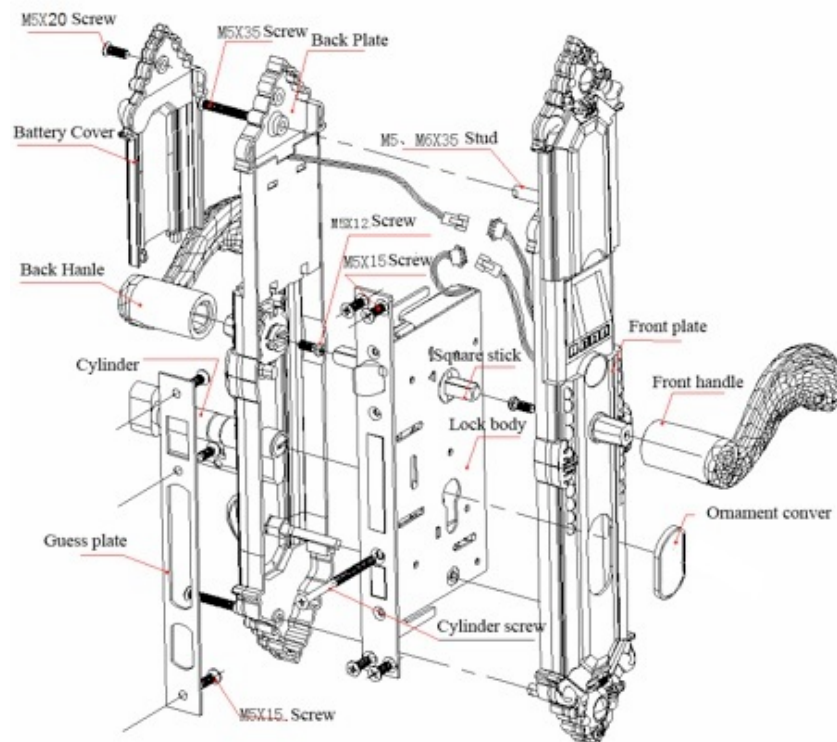

Due to the intricacy of our system we recommend a professional locksmith to install your new system. Maxwell Biometrics Inc. is not responsible for installation costs. Your System can hold up to 50 fingerprints and you’ll need some AA batteries to get started.

Up and Running...

Please note that your hands must be dry when using this device. Wet hands will make it difficult for the bio semi-conductor to read your fingerprint. Also be sure to record one finger on each hand (in case of injury)

Setting The Admin Fingerprint:

The Admin fingerprint will be able to add and remove any and all fingerprints from the device. You are given 2 admin fingerprints, the 48 additional prints will be able to use the lock, but they will not be able to delete or add users.

Slide up the cover + Press 2 (the green light will flash and the device will make a sound) + Place your Fingerprint onto the pad once until it beeps- lift it up and then place it back on the pad **until** the red *and* green light flash 3 times. (If only the red light flashes repeat the process, as your prints were not read correctly)

*You will have to lift your finger after the first beep and then place it back on the pad until your device beeps 3 times and flashes the Green and Red Light. *

Setting The Second Admin Fingerprint:

Slide up the cover + Press 2 +place original admin fingerprint (green light will flash) + Press 2 +New Admin Fingerprint.

You will have to lift your finger after the first beep and then place it back on the pad until your device beeps 3 times and flashes the Green and Red Light.

To add user fingerprints:

Slide up the cover + Press 2 +admin fingerprint (either one-- The green light will flash and the buzzer will sound.)+ press new fingerprint (The green light and the buzzer will make a sound) Press the fingerprint again. When successfully recorded the green and red light will flash. (You'll lift your finger right after your system blinks green and then place your finger back on the pad).

If the device fails to record the print only the red light will flash.

To Delete All User Fingerprints

Slide up the cover+ Press 3 (Red light will flash)+ admin fingerprint (either one- green light will flash)+”2222”+ 1 to confirm. Wait until the buzzer and green light flash 3 times.

Deleting a Single User Fingerprint via Fingerprint

Slide up the cover+ Press 3 (red light and buzzer will flash)+admin fingerprint (any one- green light will flash)+the fingerprint that you want to delete. The green light will turn on and the buzzer will make a long sound.

Deleting a Single Fingerprint Using the Fingerprint ID Code

Chart of Codes Are Located On Page 6.

Slide up the cover + Press 3 +admin fingerprint (either one)+ Fingerprint ID Code of print you want to delete + Press 1. (See page 6 for information on ID Codes)

To Revise the Password

The original password is 234234

Slide the cover up+ Press 1(red light will flash with sound)+ Admin Fingerprint (Green light will flash with sound) + your new password (must be between 6-12 digits from key 2, 3, or 4) + Press 1+ new password again + Press 1 to confirm

If the green light flashes and the buzzer makes 3 long sounds then you have successfully changed the password. (If the red light flashes you'll have to repeat the process)

Revising your new password:

Slide up the cover+ Press 1+admin fingerprint + new password(6-12 digits using keys “2”, “3”, “4”, “5” and “6”) a red light will light up for every digit pressed + press 1+ re-enter your new password + & press 1.

After 3 beeps and a green light you're good to go.

Using your Password to Open the Lock

Slide up the cover + Press 1+ Enter Your Password (6-12 digits) + Press 1